



# CENTURION

## Safety instructions for gate automation systems

### ATTENTION

To ensure the safety of people, it is important that you read all the following instructions. Incorrect installation or incorrect use of the product could cause serious harm to people and/or property.

The installer, being either professional or DIY, is the last person on the site who can ensure that the operator is safely installed, and that the whole system can be operated safely. This Safety Instruction Sheet must be passed on to the end-user responsible for operating the system during the handover.



### Warnings for the installer

**CAREFULLY READ AND FOLLOW ALL INSTRUCTIONS** BEFORE BEGINNING TO INSTALL THE PRODUCT

1. All installation, repair, and service work to this product must be done by a suitably qualified person.
2. Endstops capable of stopping the gate at rated speed are mandatory and must be fitted to prevent the gate from overrunning its limits for any reason. Failure to do this could result in the gate falling onto persons and causing serious injury or death. Refer to specifications of the operator to determine the operating speed.
3. Safety devices such as gate safety infrared beams must be fitted to the installation to prevent the gate from moving should anything be in the path of the gate. The mechanical movement of the gate presents risks such as crushing, dragging and shearing.
4. A Passive Sensitive Edge high-density foam strip should be fitted to all shearing edges of the gate installation. The Passive Sensitive Edge helps absorb the kinetic energy of a moving gate in the event of a collision, and provides additional time for the inherent electronic anti-crushing technology of the operator to react.
5. It is recommended that at least one warning indicator light be fitted to every system.
6. Always fit the warning signs visibly to the inside and outside of the gate.
7. Do not activate your gate operator unless you can see it and can determine that its area of travel is clear of people, pets, or other obstructions.
8. If a pedestrian gate opening device, such as a keypad, has been fitted it is recommended to always have a pre-opening delay activated when operating the pedestrian opening. This will allow a pedestrian sufficient time to ensure that he/she is well clear of the gate before it begins to move. Pedestrian gate opening devices should always be installed on the opposing end of the gate to where the operator is located to ensure that the gate opens away from where the pedestrian is standing.
9. **NO ONE MAY CROSS THE PATH OF A MOVING GATE.** Always keep people and objects away from the gate and its area of travel.
10. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
11. Children should be supervised to ensure that they do not play with the gate or operator.
12. Do not in any way modify the components of the automated system.

0.07.A.0062\_22072013

[www.centsys.com](http://www.centsys.com)

© 2012 Centurion Systems (Pty) Ltd.

E&OE Centurion Systems (Pty) Ltd reserves the right to change any product without prior notice

# Safety FIRST

13. Do not install the equipment in an explosive atmosphere: the presence of flammable gas or fumes is a serious source of danger and may compromise safety.
14. Before attempting any work on the system, isolate electrical power and disconnect the batteries.
15. The mains power supply of the automated system must be fitted with an all-pole switch, mounted within one metre of the operator, with contact opening distance of 3mm or greater. The use of a 5A thermal breaker with all-pole circuit break is recommended.
16. Make sure that an earth leakage circuit breaker with a threshold of 30mA is fitted upstream of the system.
17. Never short circuit the battery and do not try to recharge the batteries with power supply units other than that supplied with the product, or supplied by Centurion Systems and specified for this system.
18. Make sure that the earthing system is correctly constructed, and that all metal parts of the system are suitably earthed.
19. The installer must explain and demonstrate the manual override operation of the gate in case of an emergency, and must hand installation documentation, user guides and any Safety/Warning documents provided with the operator over to the end-user.
20. Explain these safety instructions to all persons authorised to use this gate automation system, and be sure that they understand the hazards associated with automated gates.
21. Do not leave packaging materials (plastic, polystyrene, etc.) within reach of children as such materials are potential sources of danger.
22. Dispose of all waste products like packaging materials, worn out batteries, etc, according to local regulations.
23. Always check the obstruction detection system, and/or safety devices for correct operation prior to hand-over. During the hand-over of the system, explain to the end-user how to perform these checks to confirm that all safety devices are operating correctly.
24. Centurion Systems does not accept any liability caused by improper use of the product, installation that does not conform to instructions as detailed in the installation documentation, or for any use of the operator other than that for which it was designed for.
25. This product was designed and built strictly for the use indicated in the documentation provided with the product. Any other use, not expressly indicated within the documentation, could be a source of danger and/or compromise the service life/operation of the product and invalidate the warranty.
26. Anything not expressly specified in these instructions is not permitted.



**CENTURION**

**! WARNING!**



**MOVING GATE  
CAN CAUSE  
INJURY**



**KEEP CLEAR. GATE MAY MOVE  
AT ANY TIME. DO NOT ALLOW  
CHILDREN TO PLAY IN AREA OR  
OPERATE GATE**