


COMMISSIONING

Entry Panel Selector Switch and Volume Control

- If the system has only one entry panel set the selector switch (A) to the upper position or (1).
- If there are two entry panels set the selector switch on the one panel to the upper position (1) and on the other panel to the lower position (2).
- When adjusting the speech volume start by setting the control knob (B) approximately 75% of full volume. Clockwise rotation increases the volume. Having set the volume adjustment on all the handsets to the same volume then optimise the speech volume at the entry panel(s).

FOR COMPREHENSIVE INSTRUCTIONS REFER TO THE POLOPHONE
INSTALLATION MANUAL REFERENCE: 1163.D.01.0001_2

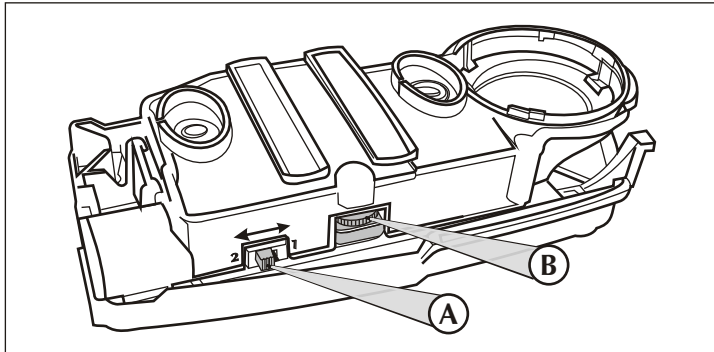

Entry Panel Selector Switch and Volume Control

CENTURION SYSTEMS (PTY) LTD

WEB: <http://www.centsys.co.za>

Sharecall Number: 0860 103 726

General information e-mail: info@centsys.co.za



POLOphone
to have and to hold




ENTRY PANEL WIRING DIAGRAM & COMMISSIONING PROCEDURE

Latest Revision: 24.11.2006 Document Ref: 1163.D.01.0002_5

WIRING DIAGRAM

ENTRY PANEL

HANDSET

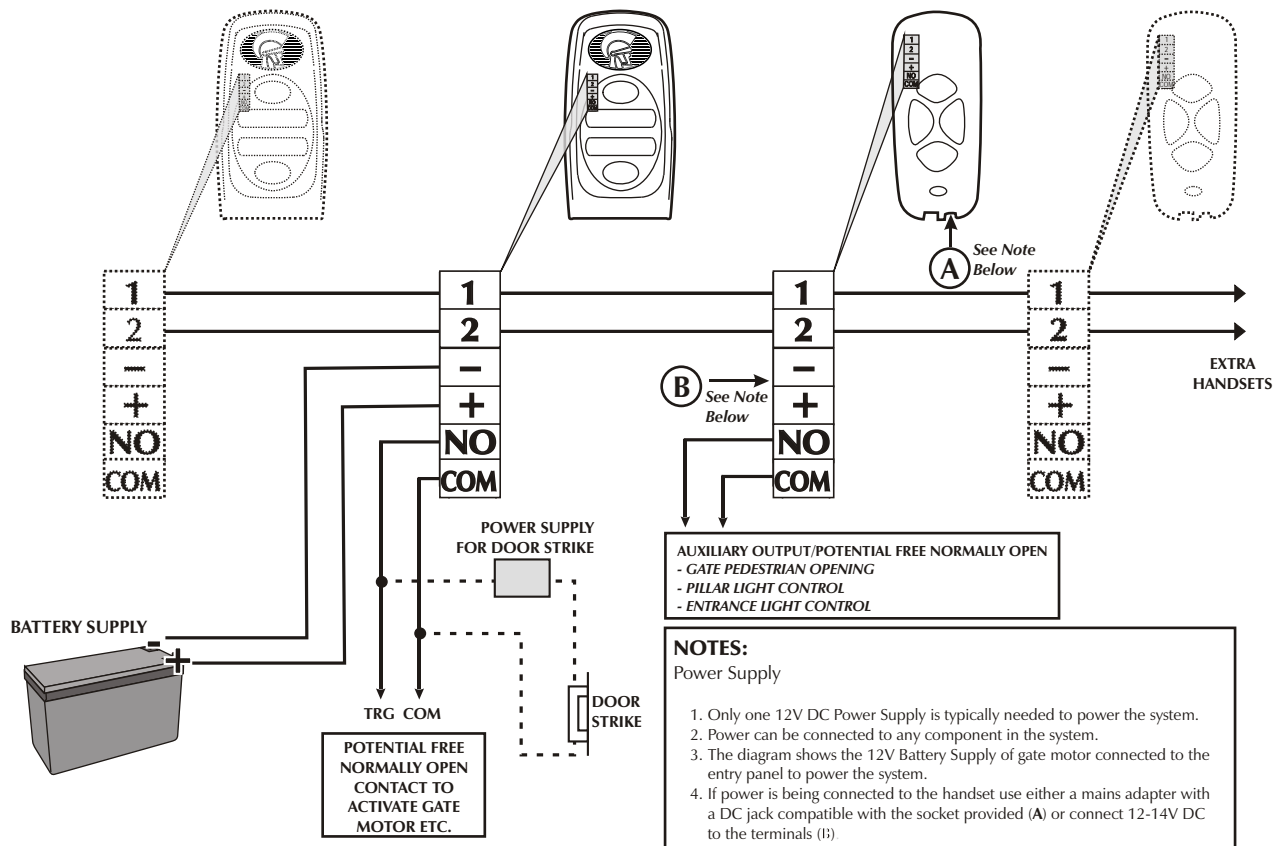

⚠ WARNING

If the gate trigger wire is connected to a potential free contact (NO or COM) on the entry panel, the gate can be opened by joining the NO and COM terminals together.

For additional security it is advisable to wire to the auxiliary terminals on the handset or connect the PoloSwitch in the gate motor.