



CENTURION

To permanently delete remote control and Wall Switch buttons learned into the XTrac garage door motor's onboard receiver, please follow the steps below. Please note that this procedure will delete ALL remote and Wall Switch buttons.

1. Momentarily press the **Learn** button. The LED will flash slowly like it does when in Learn Mode.
2. Now immediately press and hold the **Run** button until the LED starts to flash rapidly.
3. Once the flashing stops, all remote and Wall Switch buttons have been deleted.