moɔ.ɛɣɛʲnəɔ.www

Notes

Doc number: 1307.D.01.0006\_2 SAP code: DOC1307D06



The CERTURION and CERTSY Googs, all product and brand names in this document that are accompanied by the TM symbol are trademarks of Centurion Systems (PS) tud, in south Artice and other territories all inghts are received.

All product and brand names in this document that are accompanied by the @ symbol are registered trademarks in South Africa and/or other countries, in favour of Centurion Systems (Pty) Ltd, South Africa.

E&OE Centurion Systems (Pty) Ltd reserves the right to change any product without prior notice

ot 247M8) (GMT+2) (GM0 to 17N0) (GMT+2) Saturday: from 08N00 to 14N0) (GMT+2) Call Technical Support: +27 11 699 2481

Неаd Отбсе: +27 11 699 2400 Call Centurion Systems (Pty) Ltd • South Africa

Subscribe to the newsletter: www.centsys.com/subscribe

🔰 @askcenturion emsterionstems/com/centurionsystems smstzyznoinutnss/mos.koodsss 🚹 :no su dtiw toonnoo



#### **Multi-Function Relay** Wiring Guide





### **1. Introduction**

The Multi-Function Relay Board, is an interface board that allows a Low-Current and/or Low-Voltage output to drive a High-Voltage and/or a

High-Current load (3Amp @ 230VAC / 28VDC Non-Inductive)

The M-FRB can be configured to act as;

- A relay that is switched by either a Positive or Negative output
- A LED extender capable of driving multiple LEDs or other indicating device
- An interface card for an Inductive Sensor with a PNP or NPN output

The above functions are easily selected by means of a jumper.

A diagnostic LED is included to assist with troubleshooting during installation;

The LED will be ON when the relay is energised and OFF when it is de-energised.

# 2. Electrical Specifications

Input Voltage MAXIMUM	13.6 V
Input Voltage MINIMUM	10.6 V
Current Consumption	40mA +/- 10%
Relay Output Non-Inductive	3A @ 230 VAC
	3A @ 28 VDC
	TABLE 1



#### 3.1. Wiring the M-FRB as a relay



3.2. Wiring the M-FRB to control a Midi Traffic Light



#### 3.3. Wiring the M-FRB as a Multi-LED Driver



## 3.4. Wiring the M-FRB as an Inductive Sensor Interface for use with Direct Drive or Independent Drive Claws

