


From Distribution

## DC converter wallbox wiring diagram

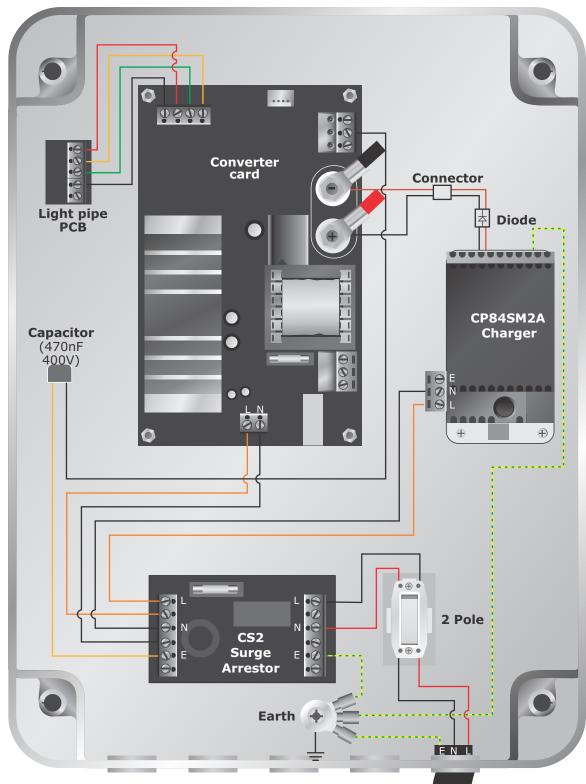



To service the DC Converter please disconnect the external battery from the converter And isolate the mains supply at the distribution board.

(NB. There may be a residual charge associated with the capacitance on the A10 operator.

To ensure safety wait for the residual charge on the A10 operator to decay to safe levels.)