




CENTURION

VECTOR gate adaptor kit

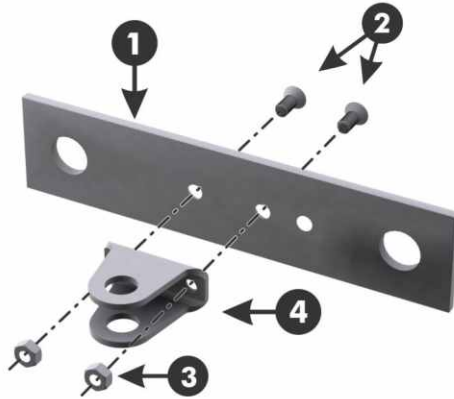

Item description

- 1 Gate bracket spreader plate
- 2 M6x10 Countersunk screw
- 3 M6 Hexnuts
- 4 Gate bracket (supplied with operator)
- 5 VECTOR gate adaptor kit packing leaflet

Application

Kit VECGAK00V1 can be applied to all VECTOR operators, and can be applied to either the standard gate bracket or piston guard gate bracket.

This kit has been designed to both simplify the installation process and improve the fatigue strength of the gate bracket connection to the gate. The thick plate together with a larger area available for welding significantly improves the fatigue life of the gate structure.

This adaptor is highly recommended for all light industrial installations to prevent fatigue failure of the gate structure where the gate bracket is mounted.

1. Attach either the standard gate bracket or piston guard gate bracket to the spreader plate (1) using the two countersunk screws (2) and nuts (3) provided.
2. Attach the entire assembly to the gate with screws or by welding.

