

## **⚠ ATTENTION**

A lightning surge arrester has been included with your current model of A10 sliding gate operator to improve the system's resistance to lightning and electrical surges. Please follow carefully the wiring diagram for connecting this unit. For effective operation of this protection device it is critical that the A10 operator is **PROPERLY EARTHED**.

Besides ensuring that the mains supply to the operator has a proper earth, it is also recommended to mount an earth spike right next to the operator. Use a thick cable (4mm<sup>2</sup>) to connect the earth spike to the earth point of the lightning arrester module and operator.

