




# D3/D5 OPERATOR PROGRAMMING GUIDE

## QUICK GUIDE

## D3/D5 operator programming guide

Three points to consider before programming the controller:

- 1 When the gate is in the CLOSED position the sensor magnet should be at least 500mm from the sensor. The gap between the sensor and the magnet must be between 13 - 20mm. The arrow on the magnet must point in the direction of the sensor.
- 2 Wiring of the motor must be correct according to the gate opening direction.
  - Closing to the Left: Black wire to the outside. (Left of the Blue wire).
  - Closing to the Right: Blue wire to the outside. (Right of the Black wire).
- 3 Ensure that you have effective endstops at both ends of the gate. (Refer to Installation manual)

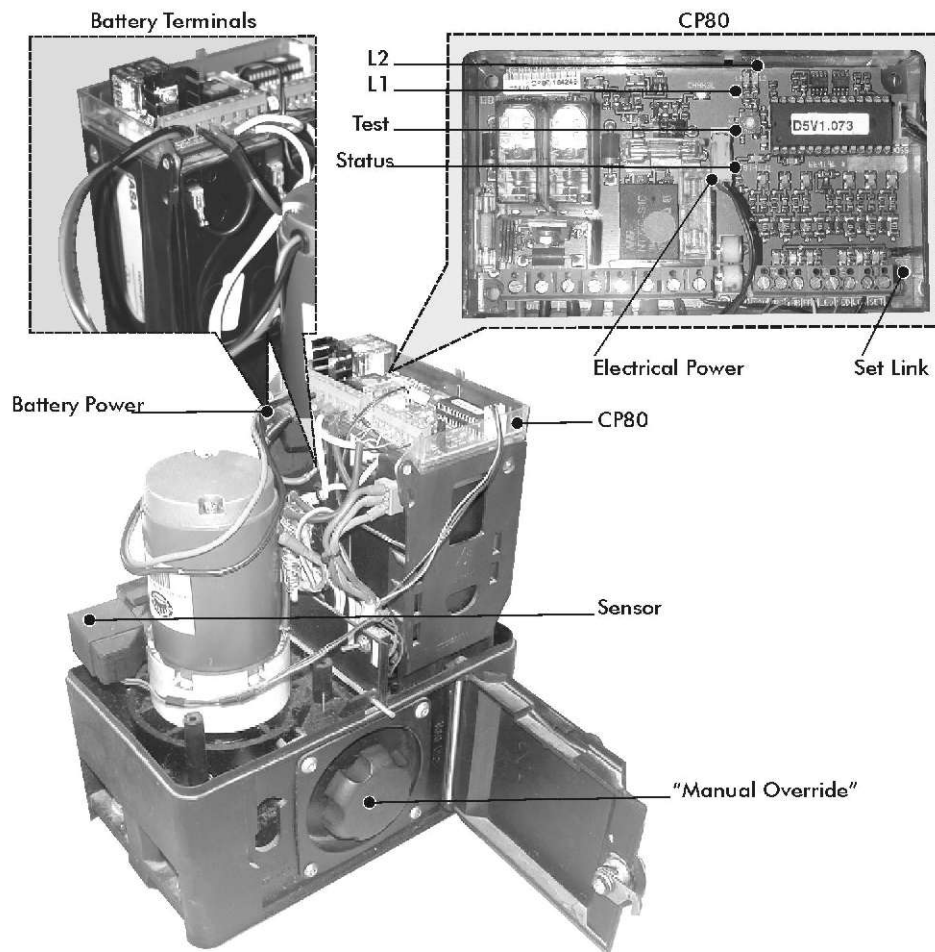

## Programming mode

- 1 Disconnect electrical charge and negative wire to battery, from the controller card
- 2 Position set link over both set pins
- 3 Replace all power to the controller card
- 4 Ensure that L2 is ON (L1 must be OFF)
- 5 Release the manual override, move the gate to the half open position and re-engage manual override
- 6 Press TEST button once. L1 will start flashing, once per second. L2 is OFF
- 7 Press and hold the TEST push button until the STATUS LED illuminates. Release TEST push button
- 8 The gate will start its automatic setup by OPENING. At the OPEN endstop the gate will stop and reverse slowly. At the CLOSED endstop the gate will stop and reverse. The gate will open quickly until the magnet reaches the origin sensor. When the gate reaches the origin sensor it will open slowly. At the OPEN endstop the gate will stop and reverse. The gate will close quickly until the magnet reaches the origin sensor. At the CLOSED endstop the gate will stop and reverse. The gate will open to the pedestrian opening point
- 9 Press TEST push button once and release

### AUTO CLOSE

Ensure controller is in programming mode (L2 is ON). Press and hold the TEST button. L1 will start flashing; once pause, once - twice, when L1 flashes twice release the TEST push button. L1 will continue to flash twice. L2 will be OFF. Press TEST button and wait until the STATUS LED flashes once. Release TEST button. L2 will illuminate. AUTO CLOSE TIME is now ON and set to 15 seconds (Factory default). Remove the SET link from the set jumper and store the link on one of the pins of the jumper, if you want to exit program mode.

### AUTO CLOSE TIME

Ensure that the controller is in programming mode (L2 is ON) Press and hold TEST button. L1 starts flashing: 1 pause, 1-2 pause 1-2-3-, release TEST button L1 continues to flash 3 times, press TEST button to set time (One flash of STATUS is equal to one second of auto-close time) Release the TEST button after the STATUS LED has flashed the required number of times L2 will illuminate AUTO CLOSE TIME is now set; remove the SET link from the set jumper and store the link on one of the pins of the jumper, if you want to exit the program mode

### COLLISION SENSITIVITY

Ensure the controller is in programming mode (L2 is ON) Press and hold the TEST button L1 starts flashing; 1 pause, 1-2 pause, 1-2-3 pause, 1-2-3-4 pause, 1-2-3-4-5 pause, 1-2-3-4-5-6 pause, 1-2-3-4-5-6-7, release TEST button L1 continues flashing 7 times and L2 will go OFF Press TEST button and wait for STATUS to flash; 1 flash = High sensitivity (Gate stops easily) 1 pause, 1-2 = Medium sensitivity (Gate stop with reasonable effort) 1 pause, 1-2 pause, 1-2-3 = High sensitivity (Gate stops with difficulty) Release the TEST button after required number of flashes L2 will go ON COLLISION SENSITIVITY is set; remove the SET link from the set jumper and store the link on one of the pins of the jumper, if you want to exit program mode



## Centurion Systems (Pty) Ltd head office:

Tel: +27 (0)11 699 2400, Fax: +27 (0)11 704 3412 or (0)11 462 6669  
(Omit (0) when dialing from outside South Africa)

Unit 13 Northlands Production Park Epsom Avenue  
Northriding Randburg Johannesburg 2196  
P.O. Box 506 Cramerview 2060  
South Africa

## Sharecall 0860-CENTURION

(Sharecall number applicable when dialed from within South Africa only)

**or visit [www.centsys.co.za](http://www.centsys.co.za)  
for details of your nearest agent**

For technical support, contact:

### South African branches and regional distributors:

Bloemfontein .....	051 430 0870
Cape Town .....	021 552 9425
Durban .....	031 701 9583
East London .....	043 743 4923
Johannesburg Central/West Rand .....	011 699 2400
Johannesburg East-Rand .....	011 397 6401
Kimberly .....	053 832 323
Nelspruit .....	013 752 8074/5
Port Elizabeth .....	041 581 6994/5
Pretoria .....	012 349 1745
Vereeniging .....	016 422 5667

### Other Countries:

Please refer to our website: [www.centsys.co.za](http://www.centsys.co.za)

Product Code:



Latest revision date: 14.09.2009

Document reference number: 1010.D.01.0173\_3

© 2007 Centurion Systems (Pty) Ltd.

Master address page: 0000.D.01.0004\_12