


Catch Post Installation Manual Sheet

- Prepare a concrete plinth for mounting the catch post by digging a hole 300 x 300 x 300mm
- Fill the hole with concrete and allow it to set completely.
- Using the base of the catch post as a template, mark and drill four 10mm diameter holes into the concrete.
- Position the catch post over the holes and secure it to the concrete plinth with four M10 sleeve anchors.

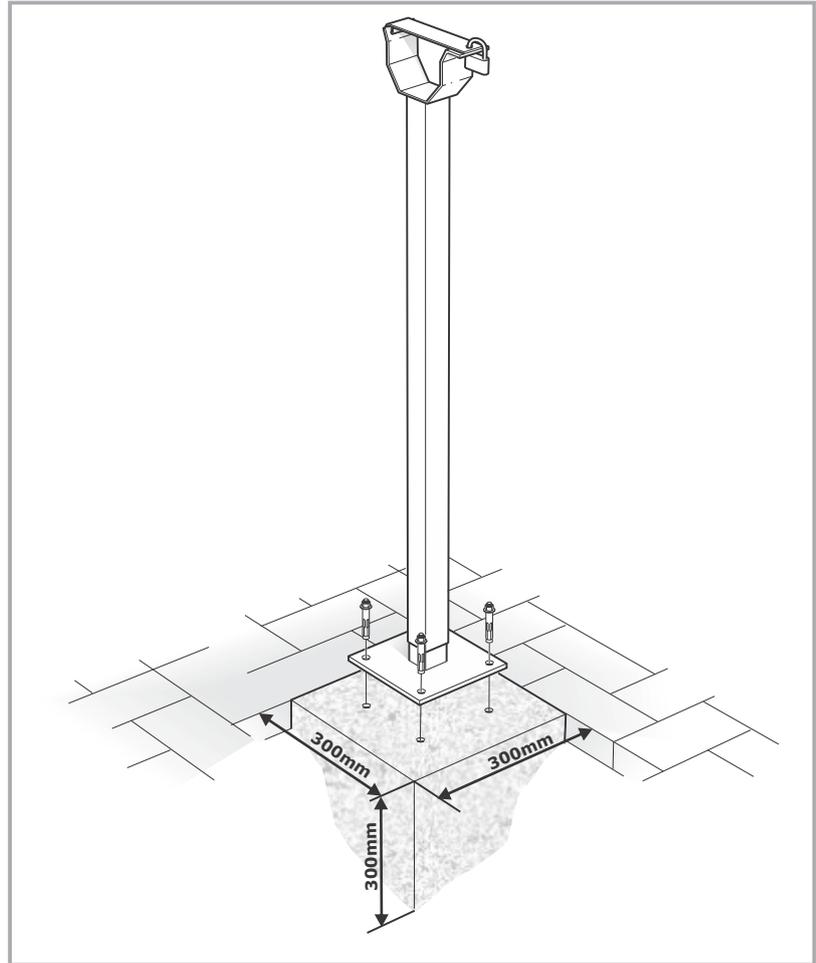

- Adjust the height of the catch post until the boom pole is level when resting in the catch post cradle.
- Using the two 3.2mm holes in the outer section of the catch post as guides, mark and drill holes through the inner section of the catch post to accommodate the two 3.2mm rivets supplied.
- Secure the outer section in position with the two rivets.

