



**Solo™**  
Proximity Access Control



# STAND-ALONE PROXIMITY ACCESS CONTROL SYSTEM

# Company Profile

---

CENTURION SYSTEMS is a manufacturing company committed to providing reliable, cost effective solutions in the field of access automation. In particular it has been manufacturing automatic gate systems since 1987.

CENTURION strives to give service and backup second to none. Our engineers are available to give sales support, installation training, and answers to technical or installation problems.

The equipment is installed worldwide and is available through a network of distributors.

CENTURION is an ISO 9001 registered company, continually looking at updating its products in line with world trends to ensure that its products will provide customer satisfaction.

Further information is available on our web site [www.centsys.co.za](http://www.centsys.co.za)



© CENTURION SYSTEMS (PTY) LTD 2007

Centurion Systems (Pty) Ltd. reserves the right to make changes to the products described in this manual without notice and without obligation of Centurion Systems (Pty) Ltd. to notify any persons of any such revisions or changes. Additionally, Centurion Systems (Pty) Ltd. makes no representations or warranties with respect to this manual.

No part of this document may be copied, stored in a retrieval system or transmitted in any form or by any means electronic, mechanical, optical or photographic, without the express prior written consent of Centurion Systems (Pty) Ltd.

*Centurion Swing Gate Operator User Guide - 1*

# Table of Contents

---

Introduction .....	4
Equipment required .....	5
Activating /enabling field test mode .....	6
Recommended connection diagram .....	6
Power output test CHD+ .....	7
LED's and 7-segment tests .....	8
FRX input test .....	9
Relay and CHD output tests .....	10
DOOR SEN input .....	12
ALARM Output test .....	12
Tag interface test .....	13
 <b>Communication interface test</b>	
<b>LSH only</b>	
Address DIP switches, RS485 terminating resistor and RS485 communications tests .....	14
 <b>L1000 only</b>	
RS485 termination resistor, RS485 and take up head communications tests .....	14
Connection diagrams for communication test .....	16
NOTES .....	17

# Introduction

---

The SOLO, LSH and L1000 Proximity access control readers have built-in test firmware to allow an installer, or user, to field test the functional integrity of the various readers.






**NB:** *It is important to note that all tests must follow the prescribed sequence as further tests rely on the success of the previous test.*




**NOTE:** *To ensure proper contact, screws must be tightened if measurements are taken on the screw tops.*

# Required Equipment

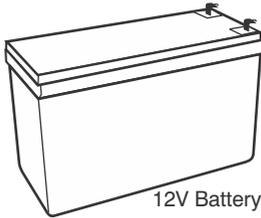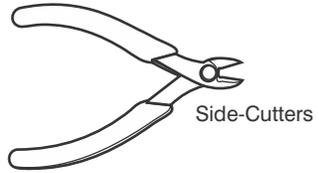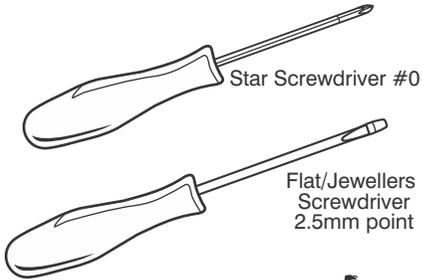




**or**

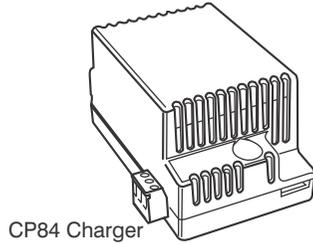

Spare jumper (test jumper)



Comms or connecting cable

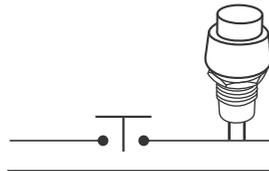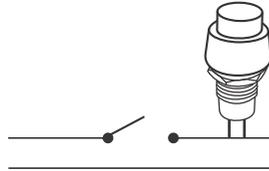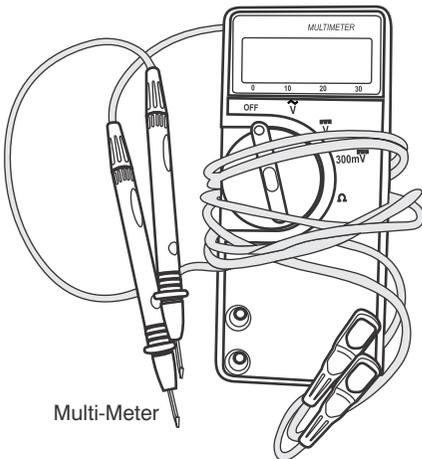

# Activating/Enabling Field Test Mode

1. Ensure that the device under test is not powered.
2. Ensure that all connections are correct as per figure 1.
3. Ensure that the test jumper and where applicable the relay jumper are correctly placed as per figure 1.
4. Ensure that the DIP switches on the LSH are all set to the ON position as per figure 1.
5. Connect power supply to the device under test.

## Recommended connection diagram

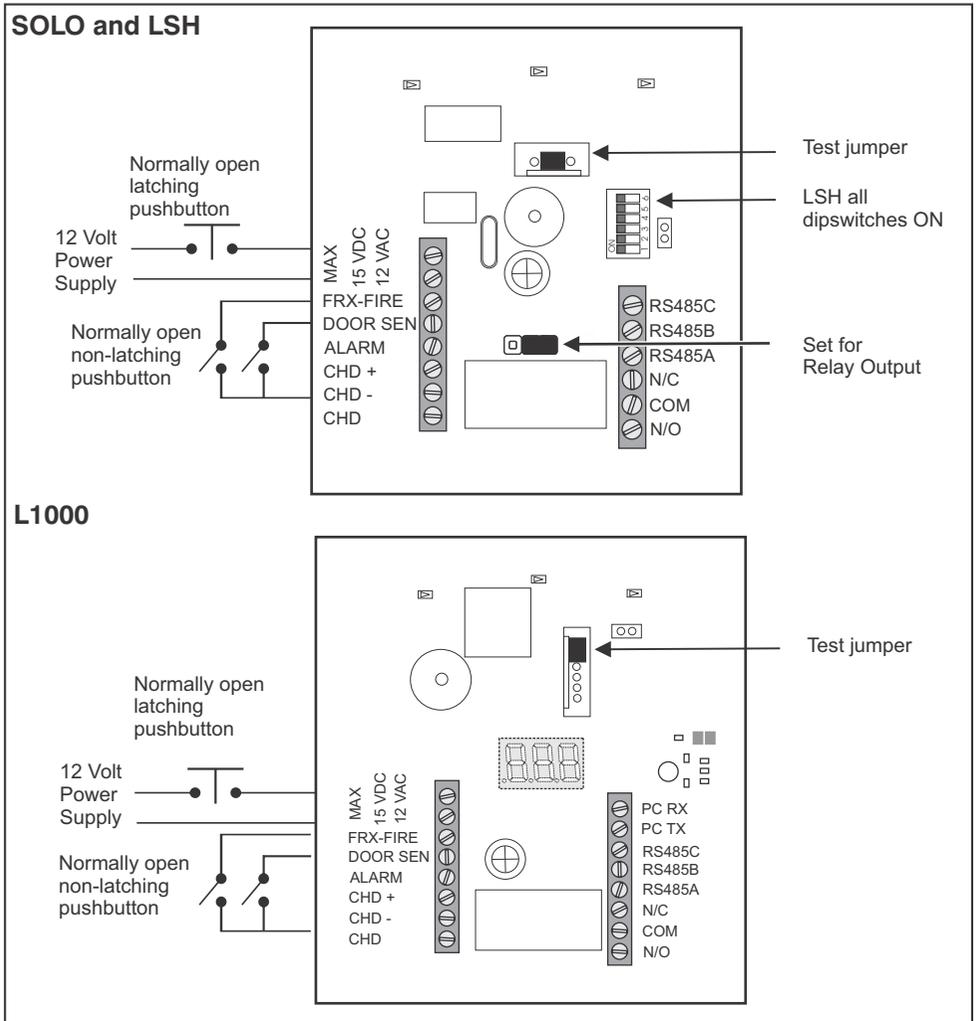


Figure 1 Connection Diagrams for the SOLO, Lattice SLAVE head and L1000 Controller

# Power Output Test CHD+

## Tests the input polarity circuit

1. Ensure proper contact with terminals during all measurements.
2. Connect power by closing the latching switch as shown in figure 1.
3. Measure and note the input voltage on the power supply pins as shown in figure 2.
4. Measure and note the voltage on the CHD- and CHD+ terminals as shown in figure 2.
5. The difference between the input voltage and the voltage measured on the CHD- and CHD+ terminals should be between 1.2 - 1.6 Volt.
6. If the voltage difference is not correct, return the unit to Centurion Systems, or a Centurion Systems authorized distributor.

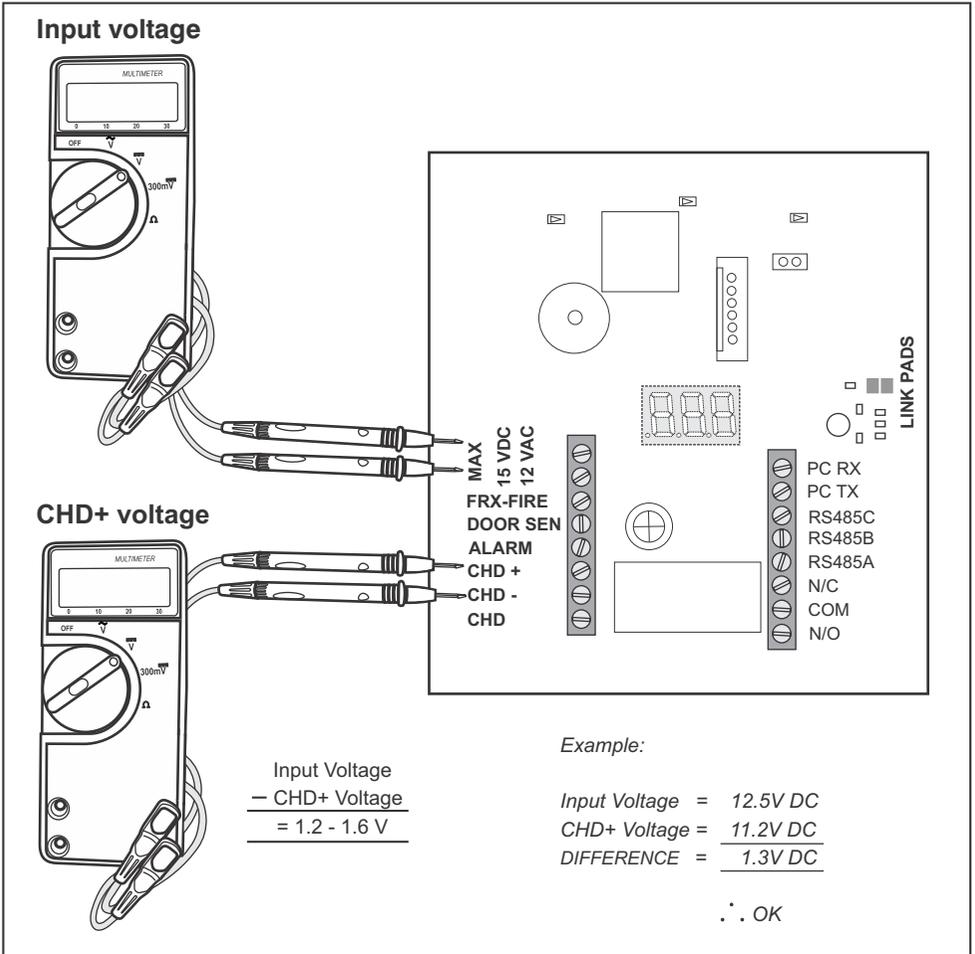


Figure 2 Input and CHD+ Voltage

# LED's and 7 Segment Indicators

---

## Tests the LED's and LED drive circuitry



**NB:** Ensure previous tests have been successfully performed.

## SOLO and LSH

1. Ensure that all 5 LED's are ON.
2. If correct move on to **memory test**.
3. If the TOP RED LED flashes once every second then the input voltage is too low.
4. If the TOP RED LED flashes 3 times every second then the input voltage is too high.
5. If the input voltage is 12 volt and the above errors occur, then the unit must be returned to Centurion Systems, or a Centurion Systems authorized distributor.

## L1000

### Tests the 3-Digit, 7-Segment display the LED's and their respective drive circuitry

1. Ensure that the top 3 LED's are ON.
2. Ensure that each segment of the 3-digit 7-segment display is turned on sequentially.
3. If correct move on to **memory test**.
4. If the TOP RED LED flashes once every second then the input voltage is too low.
5. If the input voltage is 12 volt and the above error occurs, then the unit must be returned to Centurion Systems, or a Centurion Systems authorized distributor.

# Memory Test

---

## Tests the internal memory of the SOLO and LSH readers



**NB:** Ensure previous tests have been successfully performed.



**Note:** Removing power during the memory test will corrupt the memory contents. To preserve the memory contents **DO NOT REMOVE POWER** during the memory test.

## SOLO and LSH

1. Remove the test jumper refer to Figure 1.
2. All 5 LED's will begin to flash, this indicates that the memory is being tested. **DO NOT REMOVE POWER.**
3. Once the memory test is complete the BOTTOM GREEN and RED LED's will flash.
4. If the TOP ORANGE and RED LED's flash continuously the memory test has failed. The unit must be returned to Centurion Systems, or a Centurion Systems authorized distributor.
1. Connect the multimeter to (COM and N/C) as indicated in figure 3.

---

## Test the L1000 reader's external memory and relevant control circuitry

### L1000

1. Remove the test jumper refer to figure 1.
2. The TOP ORANGE LED will turn OFF.
3. The 3-digit, 7-segment display will begin counting rapidly. **DO NOT REMOVE POWER.**
4. Once the memory test is complete only the TOP GREEN LED will flash.
5. If the 3-digit, 7-segment display shows (Error) and the TOP ORANGE and RED LED's flash continuously the memory has failed. The unit must be returned to Centurion Systems, or a Centurion Systems authorized distributor.

---

## FRX Input Test

### Tests the FRX (free exit) input circuitry

 **NB:** Ensure previous tests have been successfully performed.

1. Briefly press the normally-open switch connected to the FRX terminals as per figure 1, or momentarily short the FRX and CHD- terminals together.
2. The buzzer should sound.
3. If the buzzer does not sound return the unit to Centurion Systems, or a Centurion Systems authorized distributor.

---

## Relay Output Test

### Tests the Relay contacts and relevant drive circuitry

 **NB:** Ensure previous tests have been successfully performed.

2. Set the multimeter to Ohm (  $\Omega$  ).
3. The multimeter should read close to ZERO Ohm. ( $\pm 2$  Ohm)
4. Press the normally-open switch connected to the FRX terminal as per figure 1, or short the FRX and CHD- terminals together.
5. The multimeter should read an open circuit.
6. Release the switch, or remove the short between the FRX and CHD- terminals.
7. Connect the multimeter to (COM and N/O) as indicated in figure 4.
8. The multimeter should read an open circuit.
9. Press the normally-open switch connected to the FRX terminal as per figure 1, or short the FRX and CHD- terminals together.
10. The multimeter should read close to ZERO Ohm (  $\Omega$  ). ( $\pm 2$  Ohm)
11. Release the switch, or remove the short between the FRX and CHD- terminals.
12. Should any of the above tests fail, return the unit to Centurion Systems, or a Centurion Systems authorized distributor.

### Test the CHD output drive circuitry

---

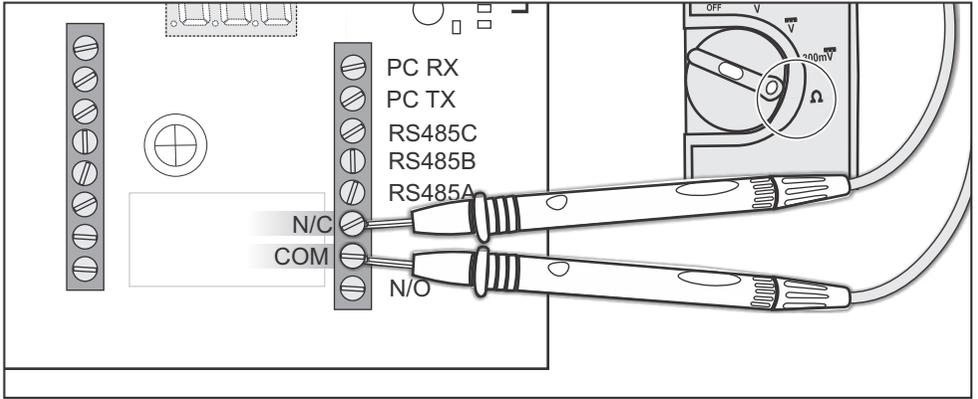


Figure 3 Multimeter connected to N/C & COM

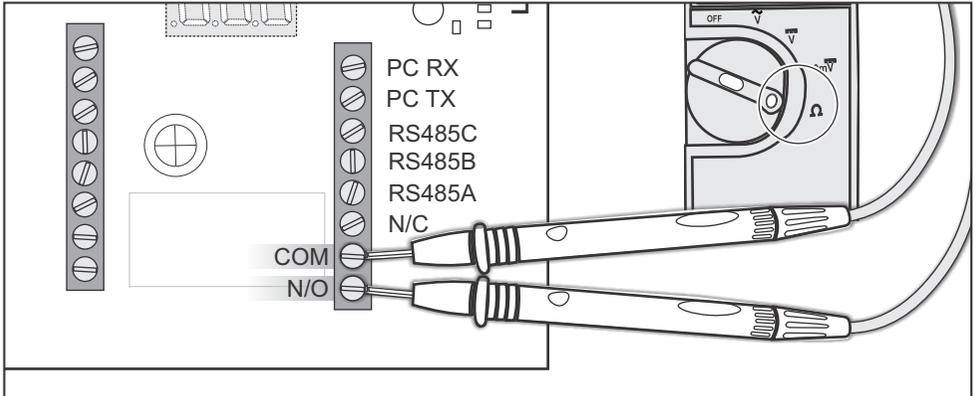


Figure 4 Multimeter connected to COM & N/O

## CHD Output Test

**⚠ NB; Ensure previous tests have been successfully performed.**  
 For the SOLO or LSH units move the jumper as indicated in figure 5.

2. Connect the multimeter to CHD- and CHD as indicated in figure 6.
3. Set the multimeter to Ohm (  $\Omega$  ).
4. The multimeter should read an open circuit.
5. Press the normally-open switch connected to the FRX terminal as per figure 1, or short the FRX and CHD- terminals together.
6. The multimeter should read close to ZERO Ohm (+/- 15 Ohm  $\Omega$  ).

# CHD Output Test

7. Release the switch, or remove the short between the FRX and CHD- terminals.
8. The multimeter should read an open circuit.
9. Should any of the above tests fail return the unit to Centurion Systems, or a Centurion Systems authorized distributor.

## Tests the DOOR SEN input circuitry

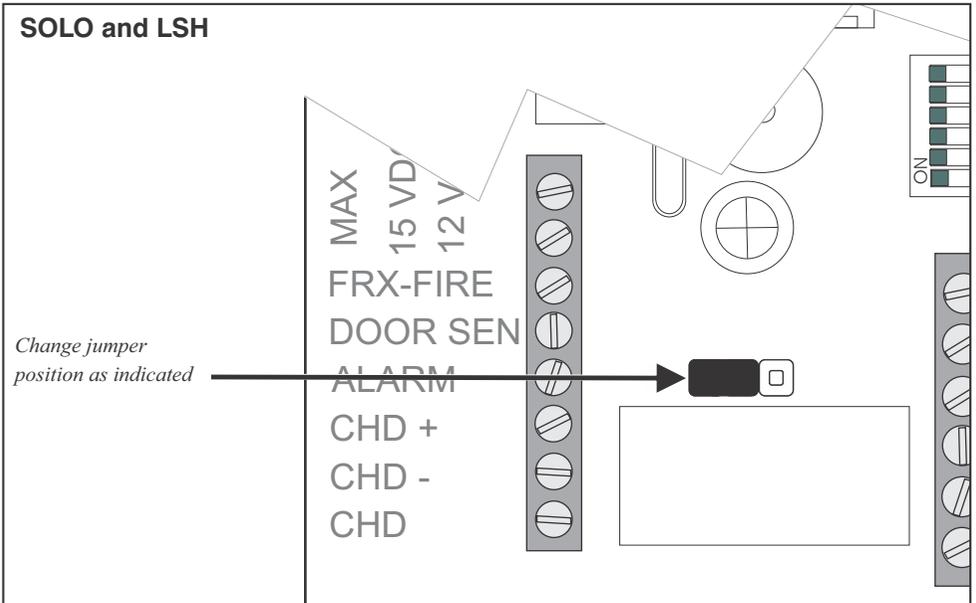


Figure 5 Solo and LSH jumper setting to test CHD Output

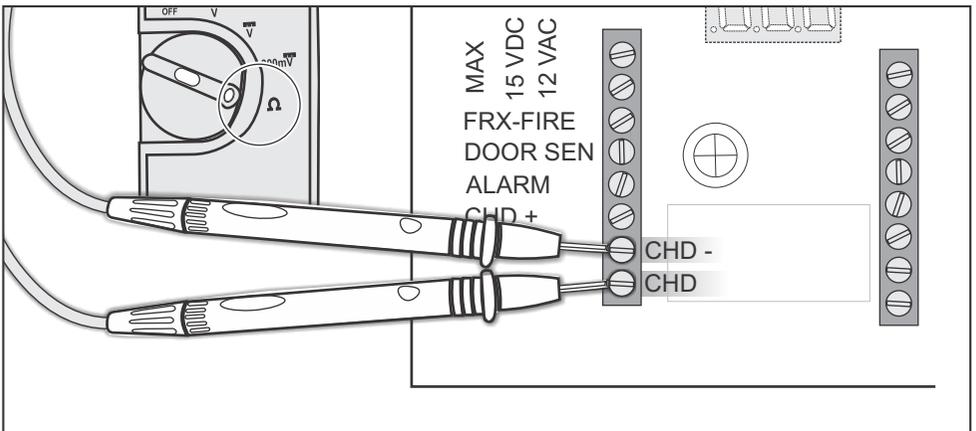


Figure 6 Multimeter connected to CHD- & CHD

# Door Sense Test

**⚠ NB:** Ensure previous tests have been successfully performed.

1. Briefly press the normally-open switch connected to the DOOR SEN terminal as per figure 1, or momentarily short the DOOR SEN and CHD- terminals together.
2. The buzzer should sound.
3. If the buzzer does not sound return the unit to Centurion Systems, or a Centurion Systems authorized distributor.

# Alarm Output Test

*tests the Alarm Output drive circuitry*

**⚠ NB:** Ensure previous tests have been successfully performed.

1. Connect the multimeter to ALARM AND CHD- as indicated in figure 7.
2. Set the multimeter to Ohm (  $\Omega$  ).
3. The multimeter should read an open circuit.
4. Press the normally-open switch connected to the DOOR SEN terminal as per figure 1, or momentarily short the DOOR SEN and CHD- terminals together.
5. The multimeter should read close to ZERO Ohm ( $\pm 15$  Ohm ).
6. Release the switch, or remove the short between the DOOR SEN and CHD- terminals.
7. The multimeter should read an open circuit.
8. Should any of the above tests fail, return the unit to Centurion Systems, or a Centurion Systems authorized distributor.

## Tests the Tag interface drive circuitry

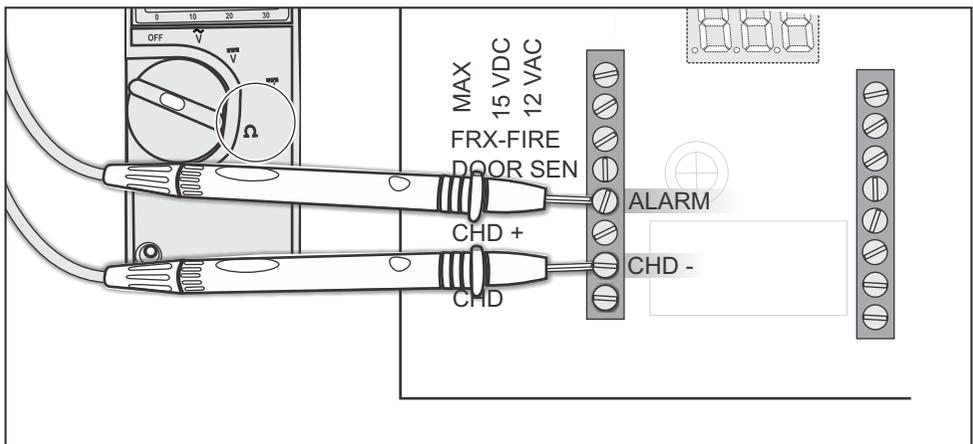



Figure 7 Multimeter connected to ALARM & CHD-

# Tag Interface Test


**!** NB: Ensure previous tests have been successfully performed.

wall/brick mounting or steel mounting and then perform the relevant test.

**!** NB: Desolder link pads for wood/masonry mounting.  
Solder link pads for steel mounting.

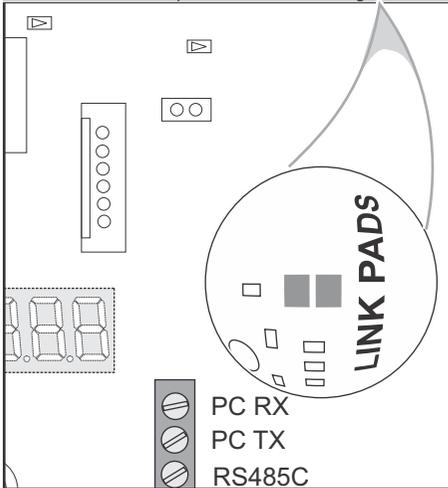

**!** NB: Jumper 2 OFF for wood/masonry mounting.  
Jumper 2 ON for steel mounting.

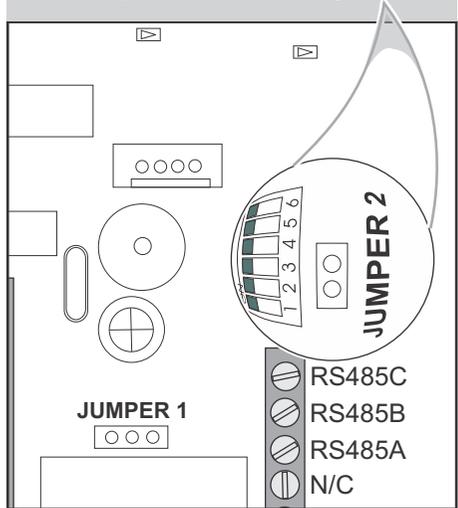

**Wood/masonry mounting refer to figure 8 or figure 9**

1. Present a known working SOLO-, LSH- or L1000-compatible proximity tag to the device under test.
2. The buzzer should sound.
3. If the buzzer does not sound, return the unit to Centurion Systems, or a Centurion Systems authorized distributor.
4. Disconnect the device under test from the power supply.
5. **SOLO tests complete.**

**Steel mounting refer to figure 8 or figure 9**

1. Fit the slide-on lid on to the device under test.
2. Rest the device under test on a steel surface.
3. Present a known working SOLO-, LSH- or L1000-compatible proximity tag to the device under test.
4. The buzzer should sound.
5. If the buzzer does not sound, return the unit to Centurion Systems, or a Centurion Systems

- 
- authorized distributor.
6. Disconnect the device under test from the power supply.
  7. **SOLO tests complete.**

# Communication Interface

~~Disconnect the unit under test from the power supply power.~~

## LSH Test

### Address dip switches, RS485 terminating resistor and RS485

1. Connect the unit under test as per figure 10.
2. Connect power to the device under test.
3. Ensure all 5 LED's turn ON.
4. Remove and replace the test jumper, refer to figure 10.
5. Wait for the buzzer to sound.
6. All 5 LED's should turn OFF.

**NOTE:** *The time taken between steps 7 and 9 that follow should not exceed 10 seconds.*



7. Remove the test jumper, refer to figure 10.
8. The buzzer should sound.
9. Starting with DIP-Switch 6 (top down) push each of the DIP-Switches to OFF within 5 seconds of each other.
10. The buzzer should sound with each DIP-Switch press.
11. After the last DIP-switch is pushed to OFF, turn the unit over.
12. The TOP GREEN and BOTTOM GREEN LED's should remain ON.
13. Should any of the above tests fail, return the unit to Centurion Systems, or a Centurion Systems authorized distributor.
14. **LSH tests complete.**

## L1000 Test

### RS485 termination resistor, RS485 communications and take-up head communications test

1. Connect the unit under test as per figure 11.
2. Connect power to the device under test.
3. Ensure all 3 LED's turn ON.
4. Remove and replace the test jumper, refer to figure 11.
5. Wait for the 3-digit, 7-segment display to show "brg". (Bridge end of line terminals).

**NOTE:** *The time taken between steps 6 and 8 that follow should not exceed 10 seconds.*



6. Remove the test jumper.
7. The buzzer should sound and the 3-digit, 7-segment display should show “**EOr**”. (End of line . . resistor).
8. Remove the end of line jumper, refer to figure 11.
9. The buzzer should sound and the 3-digit, 7-segment display should show “**ScS**”. (Success).
10. Should any of the above tests fail, return the unit to Centurion Systems, or a Centurion Systems authorized distributor.
11. **L1000 tests complete.**

# Connection Diagram

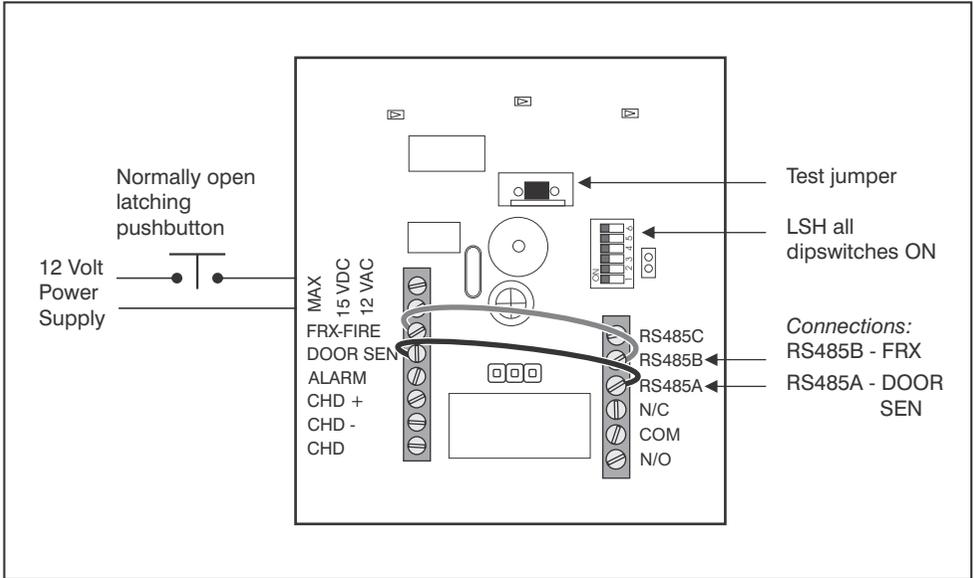


Figure 10 Lattice SLAVE head Connection Diagram

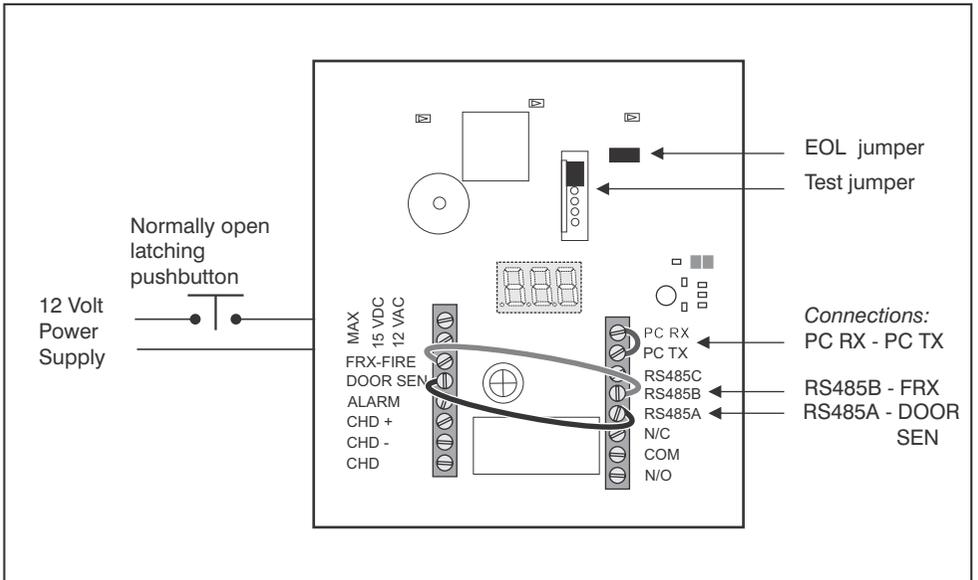


Figure 11 Lattice L1000 Controller Connection Diagram









**Sharecall 0860-CENTURION (0860 236 887)  
Head Office: +27 11 699 2400**

**Sharecall Technical Support 0861 003 123 or  
+27 11 699 2481  
from 07h00 to 18h00 (GMT+2)**

**(Sharecall numbers applicable when dialed from within South Africa only)**



0.07.A.0133\_22072013

**[www.centsys.com](http://www.centsys.com)**