



# SECTOR II RECTANGULAR BOOM POLE TRAPEX INSTALLATION MANUAL

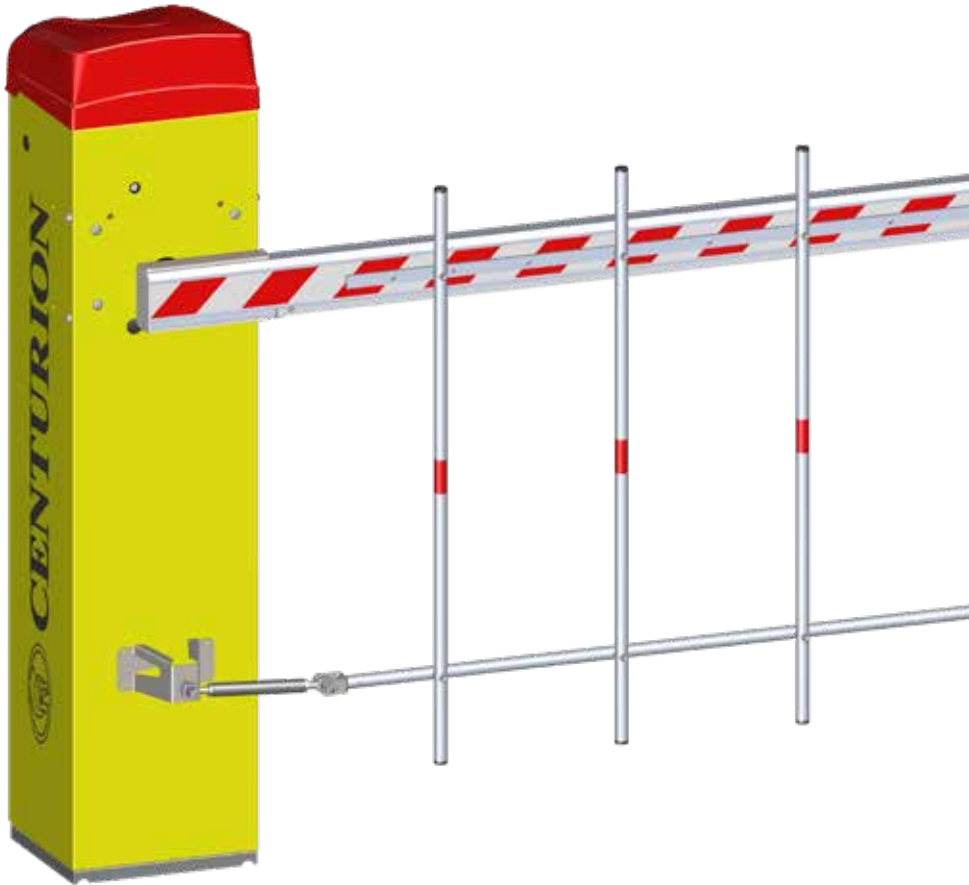

## Today

### After-sales multi-language Technical Support

**100%**  
testing of  
products

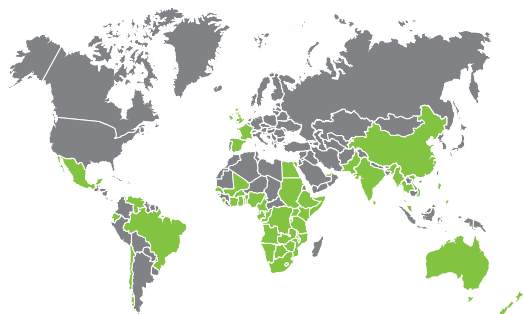

### Call Centre Operating Times

**Saturdays**  
08h00 to 14h00 GMT+2

**Centurion Systems (Pty) Ltd** reserves the right to make changes to the product described in this manual without notice and without obligation to notify any persons of any such revisions or changes. Additionally, **Centurion Systems (Pty) Ltd** makes no representations or warranties with respect to this manual. No part of this document may be copied, stored in a retrieval system or transmitted in any form or by any means electronic, mechanical, optical or photographic, without the express prior written consent of **Centurion Systems (Pty) Ltd**.



# Contents

1.	INTRODUCTION	Page 4
2.	PRODUCT IDENTIFICATION	Page 6
3.	PHYSICAL INSTALLATION	Page 7
4.	INSTALLATION HANDOVER	Page 11

## Icons used in this manual



This icon indicates tips and other information that could be useful during the installation.



This icon denotes variations and other aspects that should be considered during installation.



**This icon indicates warning, caution or attention! Please take special note of critical aspects that **MUST** be adhered to in order to prevent injury.**

# 1. Introduction



## ATTENTION!

To ensure the safety of people and possessions, it is important that you read all of the following instructions.

**Incorrect installation or incorrect use of the product could cause serious harm to people.**

**The installer, being either professional or DIY, is the last person on the site who can ensure that the operator is safely installed and that the whole system can be operated safely.**

## Warnings for the Installer

**CAREFULLY READ AND FOLLOW ALL INSTRUCTIONS before installing the product.**

- All installation, repair, and service work to this product must be carried out by a suitably qualified person
- Do not activate your barrier unless you can see it and can determine that its area of travel is clear of people, pets, or other obstructions
- **NO ONE MAY CROSS THE PATH OF A MOVING BARRIER.** Always keep people and objects away from the barrier and its area of travel
- **NEVER LET CHILDREN OPERATE OR PLAY WITH THE BARRIER CONTROLS**
- Secure all easily-accessed barrier controls in order to prevent unauthorised use of the barrier
- Do not in any way modify the components of the automated system
- Do not install the equipment in an explosive atmosphere: the presence of flammable gasses or fumes is a serious danger to safety
- Before attempting any work on the system, cut electrical power to the operator and disconnect the batteries
- The mains power supply of the automated system must be fitted with an all-pole switch with contact opening distance of 3mm or greater. Use of a 5A thermal breaker with all-pole circuit break is recommended
- Make sure that an earth leakage circuit breaker with a threshold of 30mA is fitted upstream of the system
- Never short-circuit the battery and do not try to recharge the batteries with power supply units other than that supplied with the product, or manufactured by Centurion Systems (Pty) Ltd
- Make sure that the earthing system is correctly constructed, and that all metal parts of the system are suitably earthed

- Safety devices must be fitted to the installation to guard against mechanical movement risks, such as crushing, dragging and shearing
- It is recommended that at least one warning indicator light be fitted to every system
- Always fit the warning signs visibly to the inside and outside of the barrier
- The installer must explain and demonstrate the manual operation of the barrier in case of an emergency, and must hand over the user guide to the user
- Explain these safety instructions to all persons authorised to use this barrier, and be sure that they understand the hazards associated with traffic barriers
- Do not leave packing materials (plastic, polystyrene, etc.) within reach of children as such materials are potential sources of danger
- Dispose of all waste products like packing materials, worn-out batteries, etc. according to local regulations
- Always check the obstruction detection system and safety devices for correct operation
- Neither Centurion Systems (Pty) Ltd, nor its subsidiaries, accepts any liability caused by improper use of the product, or for use other than that for which the automated system was intended
- This product was designed and built strictly for the use indicated in this documentation. Any other use, not expressly indicated here, could compromise the service life/operation of the product and/or be a source of danger
- Anything that has not been specified in these instructions may be considered a risk to your safety, and the safety of others. If you are unsure of an installation matter, please contact your nearest distributor




## 2. Product Identification

### TRAPEX LINKAGE



### TRAPEX MODULE

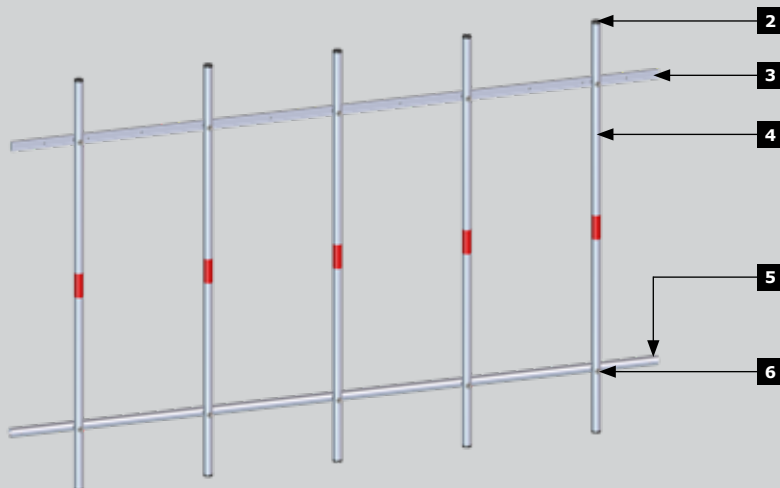

**FIGURE 1. PRODUCT IDENTIFICATION**

- 1. **TRAPEX** linkage assembly
- 2. Tube end cap
- 3. Mounting bar
- 4. Vertical linkage

- 5. Horizontal cross-bar
- 6. M5 hex dome nut

### 3. Physical Installation



The following steps should only be performed once the rectangular boom pole has been successfully fitted onto the SECTOR II .



The **TRAPEX** barrier fence consists of modular sections of 1.5 meter lengths each. These modular sections can be mounted onto the barrier pole in series to make up the length required.

1. Place the mounting bar onto the boom pole 300mm away from the edge.

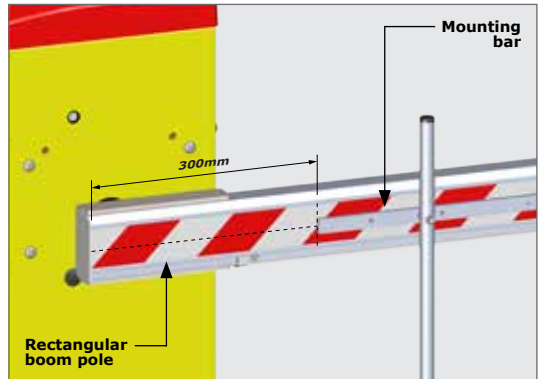


FIGURE 2

2. Mark and centre punch at least three hole positions per **TRAPEX** module for drilling.



Keep note of orientation. Holes must be facing away from the direction of traffic. **TRAPEX** must be installed on the opposite side of the LED strip.

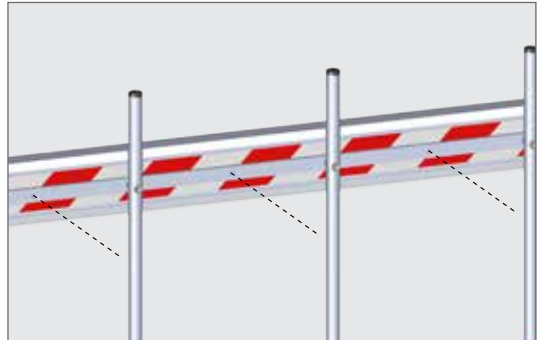


FIGURE 3

3. Drill 5mm holes.



Holes must be drilled through only one wall of the boom pole.



FIGURE 4

4. Fasten the **TRAPEX** module to the boom pole using pop rivets.

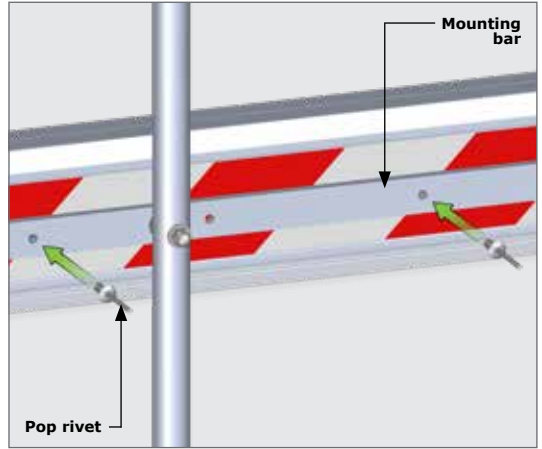


FIGURE 5

5. Repeat steps 2 to 4 on the next **TRAPEX** module ensuring that the mounting bar lines up with the previous one.



On barriers fitted with a 3m boom pole, the last module of the **TRAPEX** barrier fence will extend past the end of the boom pole, and may be trimmed if required.

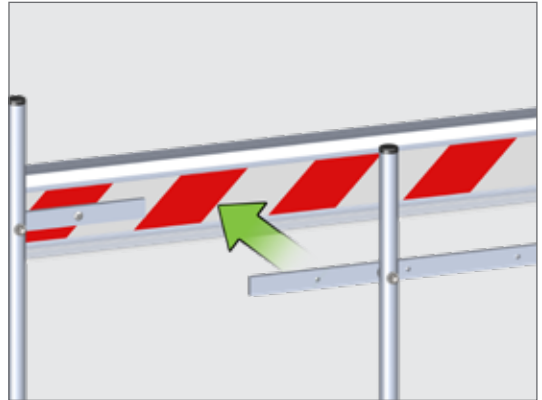


FIGURE 6

6. Join the bottom of the **TRAPEX** modules by inserting half of a module joiner into the end of the first horizontal cross-bar, and then inserting the other half of the module joiner into the horizontal cross-bar of the next **TRAPEX** module.

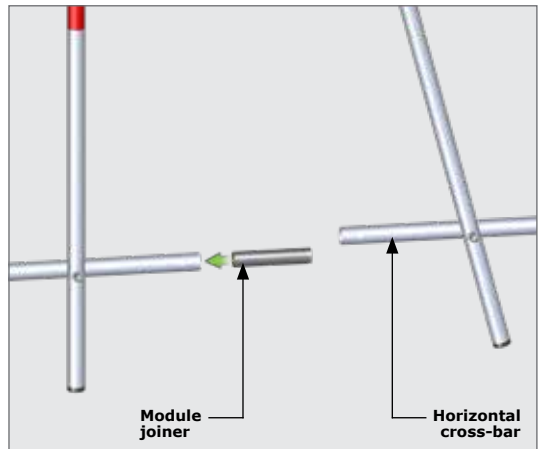


FIGURE 7



7. Mark and centre punch two hole positions on each side of the module joiner for drilling.
8. Drill four 5mm holes.

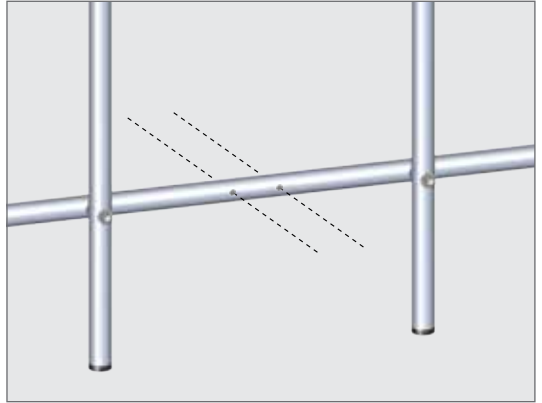


FIGURE 8

9. Fasten the horizontal cross-bars to the module joiner using two pop rivets on each side.



Add as many **TRAPEX** modules as you need to cover the length of the boom pole.

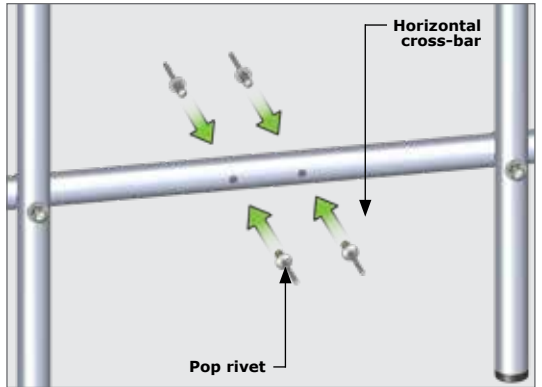


FIGURE 9

10. Remove the plug on the bottom end of the cabinet and place the **TRAPEX** linkage assembly against the cabinet.
11. Replace the plug to hold the **TRAPEX** linkage assembly in place.

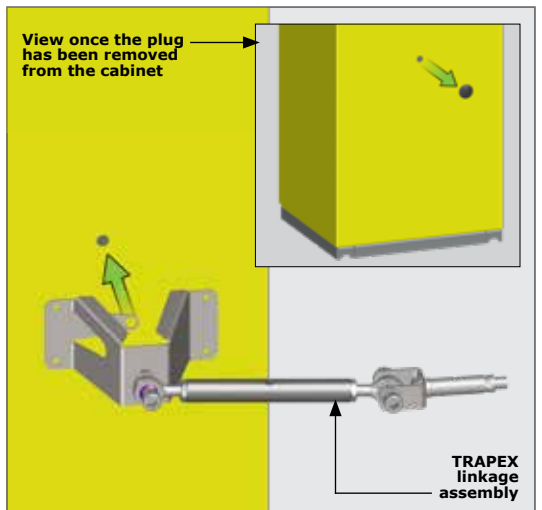


FIGURE 10

12. Mark and centre punch four hole positions on the cabinet for drilling.

13. Drill four 5mm holes.



**Ensure that the TRAPEX linkage module is perfectly horizontal to the ground.**

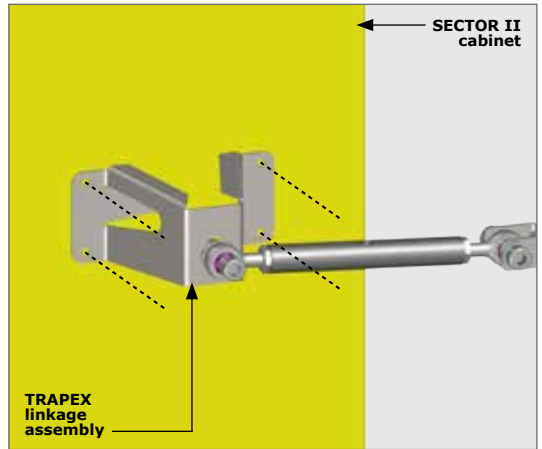


FIGURE 11

14. Fasten the **TRAPEX** linkage assembly to the cabinet using four pop rivets.

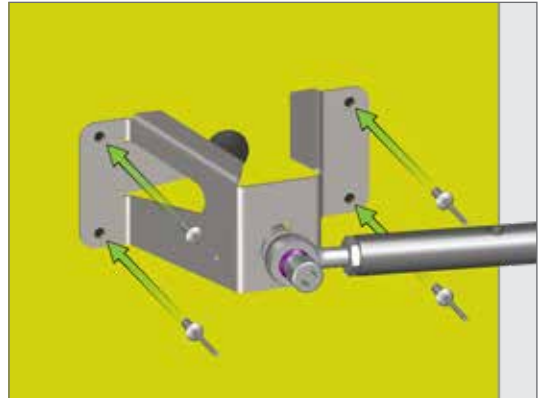


FIGURE 12

15. Insert the expansion bolt on the **TRAPEX** linkage into the horizontal cross-bar and fasten it in place.



To tighten the expansion bolt, you may have to remove the M10 bolts nearest to the expansion bolt, to make space for a spanner.

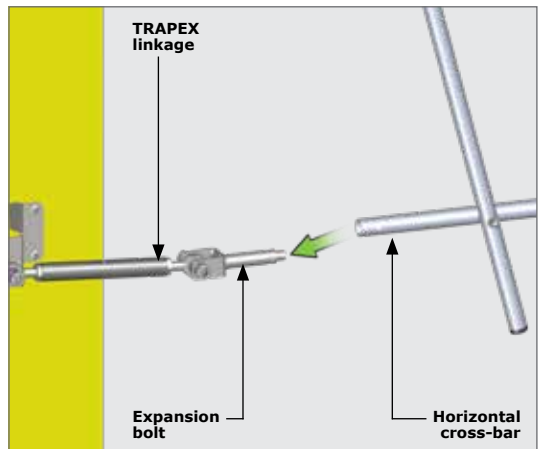


FIGURE 13

## 4. Installation Handover

Once the **TRAPEX** has been successfully installed and its operation tested, it is important for the operation and safety considerations to be explained to the end-user of the system.



**Connect with us on:**

 **facebook.com/centurionsystems**

 **YouTube.com/centurionsystems**

 **@askcenturion**

 **centurion.systems**

**Subscribe to the newsletter: [www.centsys.com/subscribe](http://www.centsys.com/subscribe)**

**Call Centurion Systems (Pty) Ltd • South Africa  
Head Office: +27 11 699 2400**

**Call Technical Support: +27 11 699 2481  
Monday to Friday: from 08h00 to 17h00 (GMT+2)  
Saturday: from 08h00 to 14h00 (GMT+2)**

**E&OE Centurion Systems (Pty) Ltd reserves the right to change any product without prior notice**

All product and brand names in this document that are accompanied by the ® symbol are registered trademarks in South Africa and/or other countries, in favour of Centurion Systems (Pty) Ltd, South Africa.

The CENTURION and CENTSYS logos, all product and brand names in this document that are accompanied by the TM symbol are trademarks of Centurion Systems (Pty) Ltd, in South Africa and other territories; all rights are reserved.

We invite you to contact us for further details.



**Doc number: 1314.D.01.0003\_21022023**

**[www.centsys.com](http://www.centsys.com)**